

IMPORTANT NOTICE – READ CAREFULLY

Stop and Waste Ball Valves Installation Instructions

Ford Ball Valves provide quality features throughout. For best results, be sure to follow the installation instructions listed below.

INSTRUCTIONS AND PRECAUTIONS

1. During installation note the flow direction indicated on the valve. The drain hole is located on the outlet side of the valve. **Incorrect flow direction will cause the valve to leak constantly in the closed position.**
2. If valve is to be buried, backfill with “pea” gravel around valve to keep drain hole unobstructed.
3. Protect valve from freezing. Attempting to cycle when frozen will damage valve.
4. To ensure proper valve performance the valve must be in **Full Open** or **Full Closed** position.
5. **THIS VALVE IS TO BE USED ON WATER LINE APPLICATIONS ONLY.**
6. Stop and Waste Ball Valves are designed to withstand pressures up to 150 PSI.



The Ford Meter Box Company, Inc.

P.O. Box 443, Wabash, Indiana, USA 46992-0443
Telephone: 260/563-3171 FAX: 1-800-826-3487
Overseas FAX: 260/563-0167
<http://www.fordmeterbox.com>

WARRANTY

All merchandise is warranted to be free from defects in material and factory workmanship. We provide free of charge new products in equal quantities for any that prove defective within one year from the date of shipment from our factory. **Manufacturer shall not be liable for any loss, damage, or injury, direct or consequential, arising out of the use of or the inability to use the product. Before using, user shall determine the suitability of the product for his intended use and user assumes all risk and liability whatever in connection therewith. No claims for labor or consequential damage will be allowed.** The foregoing may not be changed except by agreement signed by an officer of the manufacturer.



The Ford Meter Box Company, Inc.

P.O. Box 443, Wabash, Indiana, USA 46992-0443
Telephone: 260/563-3171 FAX: 1-800-826-3487
Overseas FAX: 260/563-0167
<http://www.fordmeterbox.com>