



W3-1-4 INSTALLATION INSTRUCTIONS

- Place the cover on the tile/pipe in a fairly centered position to allow cam rotation to snug the cover lugs against the tile/pipe. If needed, see table below for positioning information.

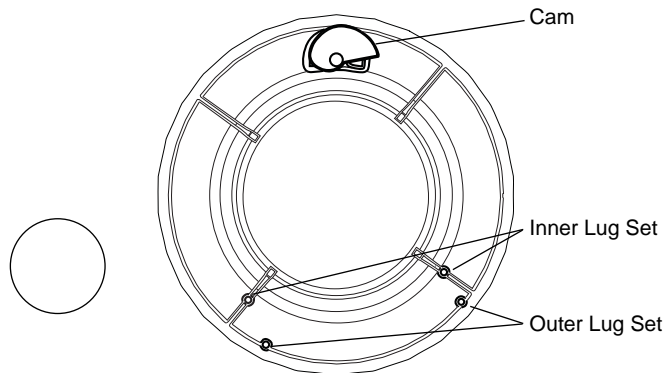

- Allowing the cover to move freely, torque the locknut with a 9/16" socket or wrench to 20 ft. lb. **Do not use power tools.**

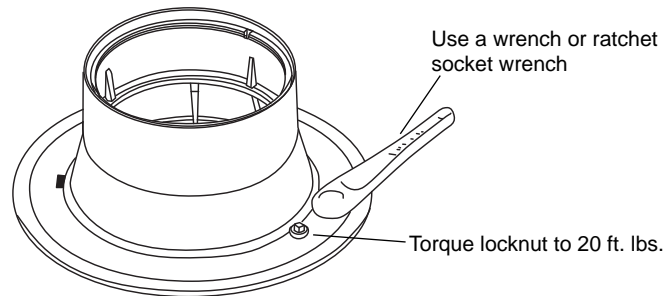

- See Ford Meter Box catalog section D for additional installation instructions, maintenance and precautions.

CENTERING INFORMATION TABLE

TILE / PIPE SIZE (RANGE)	TILE / PIPE PLACEMENT	
	At Lugs	At CAM
	15-1/4" - 15-3/4" O.D.	Place Tile O.D. Inside Inner Lug Set
16" - 17-1/4 I.D. AND 17" - 17-3/4" O.D.	Place Tile Between Inner and Outer Lug Sets	Place Tile O.D. Inside Cam
17-1/2" - 19-1/4" I.D. AND 17-3/4" - 20-1/2" O.D.	Place Tile Between Inner and Outer Lug Sets	Place Tile I.D. Outside Cam
19-1/2" - 21" I.D.	Place Tile I.D. Outside Outer Lug Set	Place Tile I.D. Outside Cam



The Ford Meter Box Company, Inc. 775 Manchester Avenue, P.O. Box 443
 Wabash, Indiana 46992-0443 USA Phone: 260-563-3171 • Domestic FAX: 800-826-3487
 Overseas FAX: 260-563-0167 • <http://www.fordmeterbox.com>