


IMPORTANT NOTICE – READ CAREFULLY

Instructions for Fiber Gasket Installation

- (1) Install the fiber gasket provided prior to connection and pressurizing line.
- (2) Install fiber gasket provided between male double purpose end and union swivel.
- (3) Do not use on flare copper connections.
- (4) Always pressure test for leaks before backfilling.

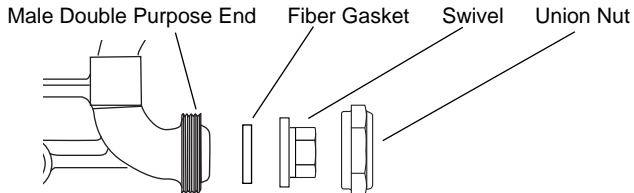

THE FORD METER BOX COMPANY, INC.

P.O. Box 443, Wabash, Indiana, USA 46992-0443

Phone: 260-563-3171 • FAX: 800-826-3487

Overseas FAX: 260-563-0167 • <http://www.fordmeterbox.com>