


## Washer Instructions

### HDPE Applications SDR's 9-17 Only

Proper Spring Washer orientation is important. Use the following illustrations to determine the correct orientation during assembly on HDPE pipe.

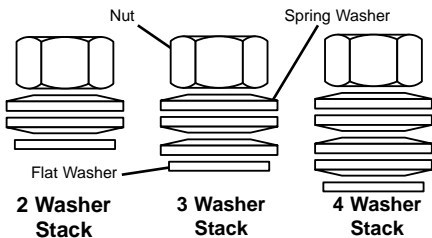

Nom. Pipe Size	Product Type	
	FSP202, FCP202	FTSP, FTSCP
	Quantity (Size)	Quantity (Size)
4"	2 (5/8")	2 (5/8")
6"	2 (5/8")	2 (5/8")
8"	3 (5/8")	2 (3/4")
10"	3 (5/8")	3 (3/4")
12"	4 (5/8")	3 (3/4")

**IMPORTANT: A 24 Hour period between installation and re-torquing is recommended.**

**Caution:** Ford has tested specifically designed Saddles and Tapping Sleeves to ensure that proper installation will withstand pressures up to the rated pressure of HDPE pipe. Other Ford Saddle and Tapping Sleeve styles are not recommended for HDPE pipe. Ford has no opinion as to the suitability of its products, or of their effect, on PE pipe over the service lifetime of the PE pipe. Please consult the manufacturer of the PE pipe concerning its long term performance.